




ACCU-SEAL PRO™

— BURST PANEL GASKETS —

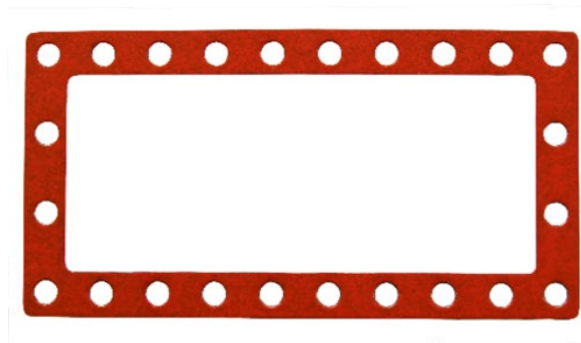

Installation Instructions

Features & Benefits:

- Steel-core, high density facing material .040" thick.
- SCE's signature red Teflon® coating.
- Dependable sealing, re-usable.
- Non-Stick, will not absorb fuel or oil

Available for small and large burst panel sizes.

- 3.250" Small burst panel gaskets - 329171 packaged 2 per set
- 329171-10 Dyno Pak packaged 10 per set.
- 3.250" Large burst panel gaskets - 329170 packaged 2 per set
- 329170-10 Dyno Pak packaged 10 per set.

Steps:

- 1.** Thoroughly clean all sealing surfaces.
- 2.** Place 2 bolts on opposite ends through front frame, place front gasket over bolts in frame with red side toward frame.
- 3.** Place burst panel on front frame/gasket with SFI label facing out, place rear gasket on frame/front gasket/burst panel assembly with red side toward manifold mounting surface.
- 4.** Place assembly on manifold and hand tighten all 24 bolts
- 5.** Torque bolts (not to exceed 20 IN/LB) from center of frame outward.